

Installation Instructions for the RX 3/8 to 1 1/2 in with Stationary Syphon

 fluidhandling.kadant.com/en/knowledge-center/installation-and-repair-instructions/rx-3-8-1-1-2-in-stationary-syphon


Effective: March 7, 2024



Introduction

Read all of the instructions before proceeding.

Refer to Kadant Johnson assembly drawing for part identification and to drawing A37640 for torque specifications. For easy identification, parts used in individual steps are often accompanied with their position in the assembly drawing [e.g. gasket (8B)]. Tighten all fasteners in a star pattern. Certified drawings are available upon request. Dimensions are for reference only and subject to change.

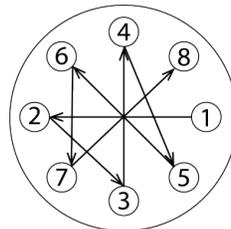


Safety

 This safety symbol alerts you to risk of death or injury if the instructions are not followed. In all steps, death or injury may result if the machine is not de-energized, depressurized, cooled, and stopped. Death or injury may occur if the product is operated with a fluid type or at a pressure, temperature, or speed that do not meet its specifications. Death or injury may occur if heavy parts and pinch hazards are not handled properly. Follow your company's safety procedures.

Step 1

Remove the existing equipment. If installing a new journal flange remove the existing and clean all sealing surfaces.

NOTE: There are three different ways to attach the rotary joint to the roll. For threaded nipple proceed to Step 2, quick release Step 3, and integral flanged Step 4.

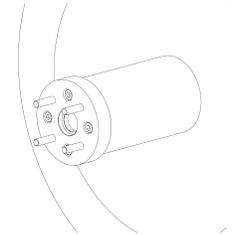


 Equipment must be cool and free of pressure.

STEP 2A, THREADED NIPPLE


Carefully thread the supply pipe into the rotary union elbow (2).

 Use caution during this step. Internal seals can be damaged.




STEP 2B

Using the required sealant for your threaded nipple, thread the nipple (4) into the journal and tighten: Pipe sealant for tapered threads; gasket for straight threads; O-Ring for C.A.M.M. Proceed to Step 5.

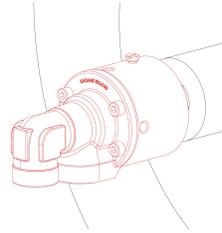


STEP 3C

Place metal gasket (8Q) into the journal flange. Lift the rotary joint up and into the journal flange. Secure to studs with nuts. An even gap of 1/8" to 3/16" (3 to 5 mm) should remain in between the journal flange and nipple flange. Proceed to Step 5.

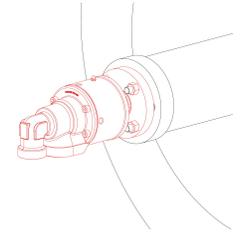

STEP 3A, QUICK RELEASE NIPPLE


Carefully thread the supply pipe into the rotary union elbow (2).



Step 4A, INTEGRAL FLANGED NIPPLE


Carefully thread the supply pipe into the rotary union elbow (2).

 Use caution during this step. Internal seals can be damaged.




STEP 3B

Slide the nipple flange over the rotary joint nipple with the taper facing out. Place the split wedges into the recess of the nipple. Slide the nipple flange over the wedges.

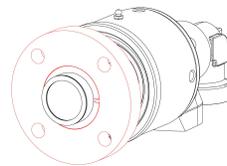

Step 4B

Place gasket on nipple flange and slide over the studs on the journal. Secure with hex nuts.

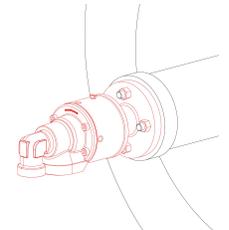

Step 5

Pay special attention to concentricity. At high-speeds the bearing will yield longer, trouble-free service if runout is kept to a minimum.


Step 6

Connect the piping to the rotary joint using rubber hose or Kadant Johnson flexible hose. Hose ratings must be able to sustain the flow media.

Recommended Minimum Hose Lengths For Flexible Metal Hose	
Pipe Size	Minimum Length
1/4"	8" (200 mm)
3/8"	10" (250 mm)
1/2"	10" (250 mm)
3/4"	12" (300 mm)
1"	15" (380 mm)
1 1/4"	18" (450 mm)
1 1/2"	18" (450 mm)

Step 7

There are four vent holes located on the body (1). They provide an escape path in case the seal package leaks and also prevent fluid from flooding the bearing cavity. Ensure that one hole is positioned down and plug the other 3. A flexible drain line may be attached if needed.

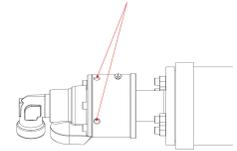

IS RX 3/8" to 1 1/2" Stationary Syphon

The Kadant Johnson Warranty

Kadant Johnson products are built to a high standard of quality. Performance is what you desire: that is what we provide. Kadant Johnson products are warranted against defects in materials and workmanship for a period of one year after the date of shipment. It is expressly understood and agreed that the limit of Kadant Johnson's liability shall, at Kadant Johnson's sole option, be the repair or resupply of a like quantity of non-defective product.

Kadant Johnson rotary joints and accessories could be subject to European Pressure Equipment Directive 2014/68/EU (PED). Modifications or changes to rotary joints and/or accessories are only permitted upon approval of Kadant Johnson. Only genuine Kadant parts and original accessories will ensure the safety of these assemblies. The use of other than original parts voids the warranty and will lead to forfeiture of the declaration of conformity and will invalidate any liability for damages cause thereby.